

2D Barcode Scanner Quick Start Guide

System Settings



Factory Defaults



Version

Communication Interface



USB Mode



TTL/RS232 Mode*

Reading Mode



Manual Mode*



Sense Mode

Baud Rate



9600*



115200

Suffix Settings



Add CR



Add CR+LF*



Add Tab(HT)



NONE

Sound Settings



Enable Sound*



Disable Sound

Data Format



GB2312



Unicode(UTF-8)

Other Settings



Enable All Barcode



Enable All 1D Barcode



Enable All 2D Barcode



Read Regular And Inverse
Barcode