

2DBarcode Scanner Quick Start Guide

2H V1.1

System Settings



Factory Defaults



Version Check

Communication Interface



USB Mode*



TTL/RS232 Mode

Baud Rate



9600*

115200

Reading Mode



Manual Mode*



Auto-Sense Mode

Suffix Settings



Allow Suffix*



Suffix Not Allowed



Add CR*



Add CR+LF

Data Format



GBK*



Unicode

Sound Settings



Enable Sound*



Disable Sound

Indication Light Settings



Enable Light*



Disable Light

Indication Light And Buzzer

1. Scan successfully: Blue light flash once time.
2. Voice prompt: The buzzer will beep once the code is successfully read.

Other Settings



Enable All Bar code



Enable All 1D Bar code



Disable 1D Bar code



Enable All 2D Bar code



Disable 2D Bar code